
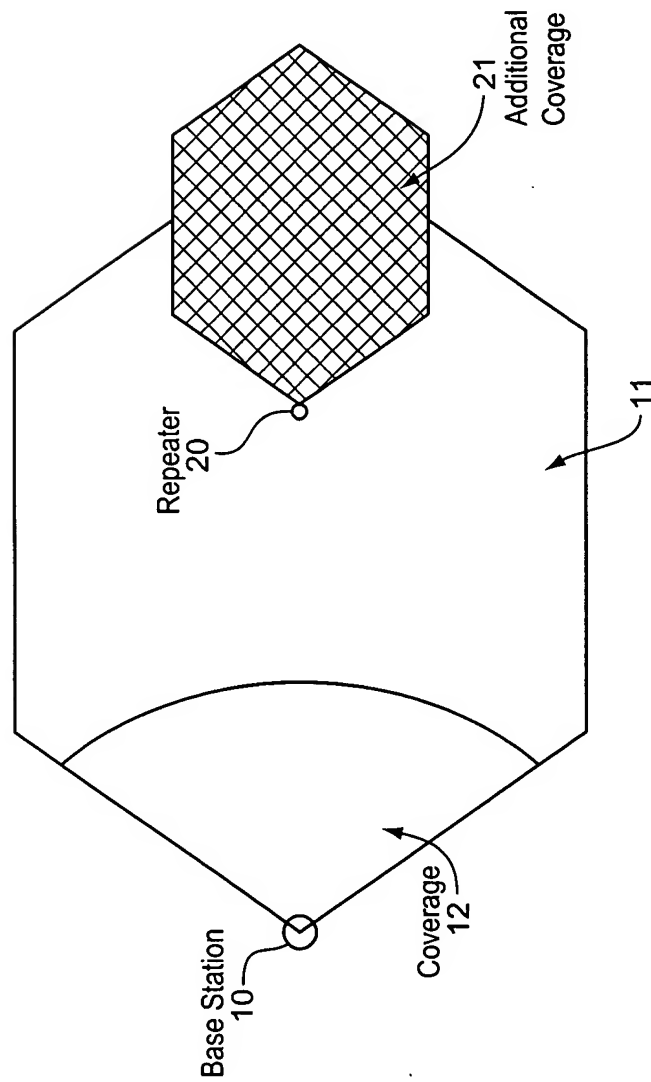


1/6

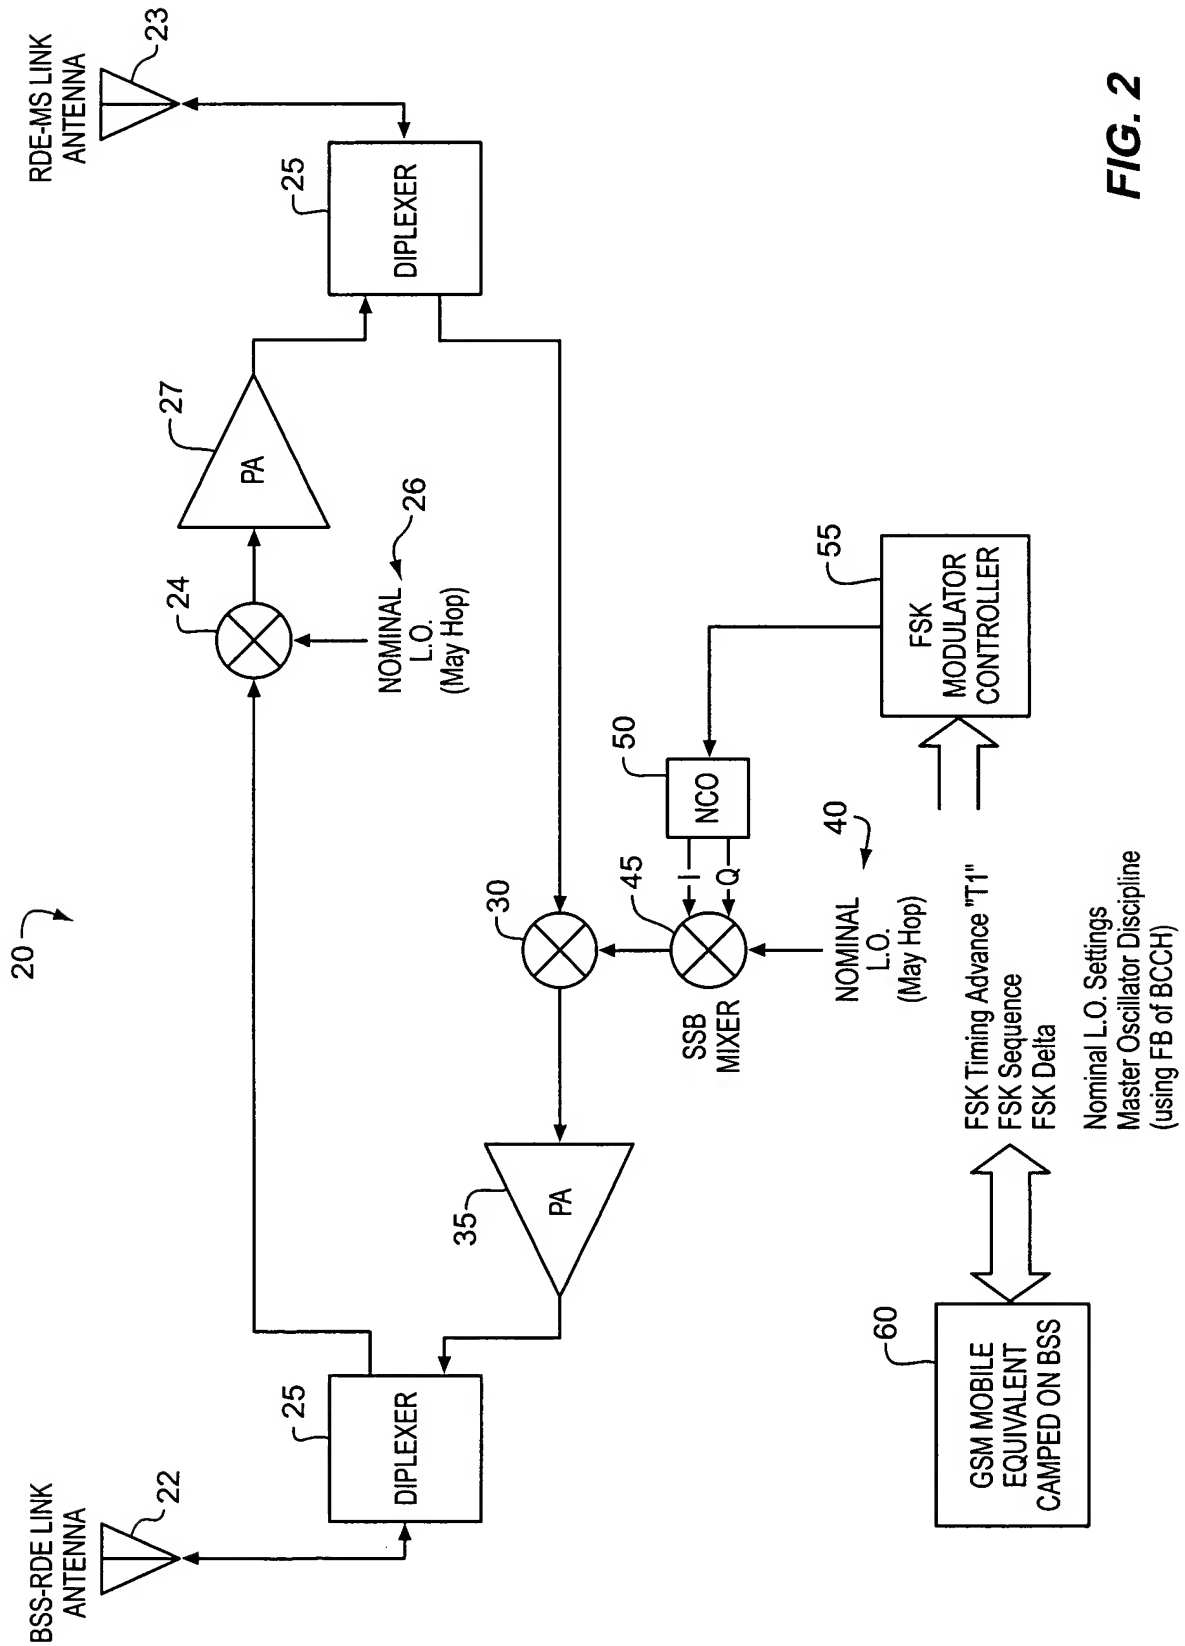

2/6



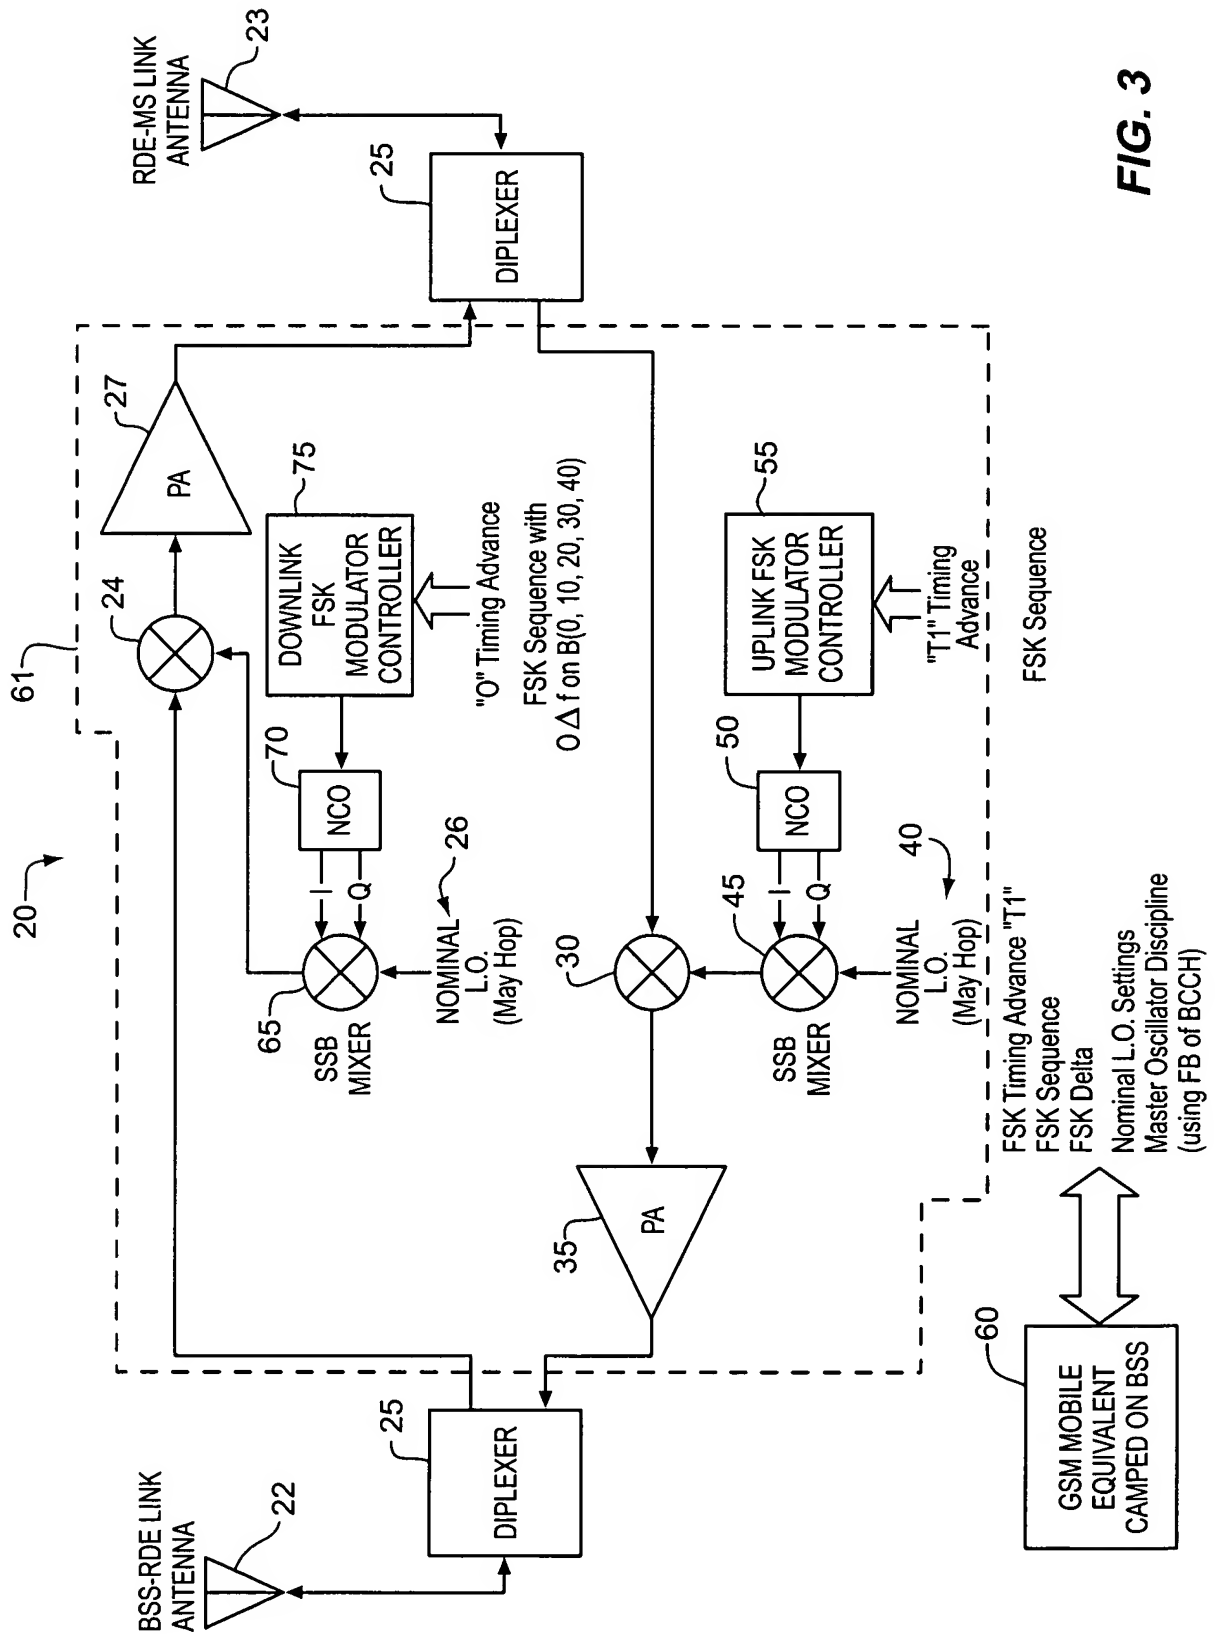


FIG. 3

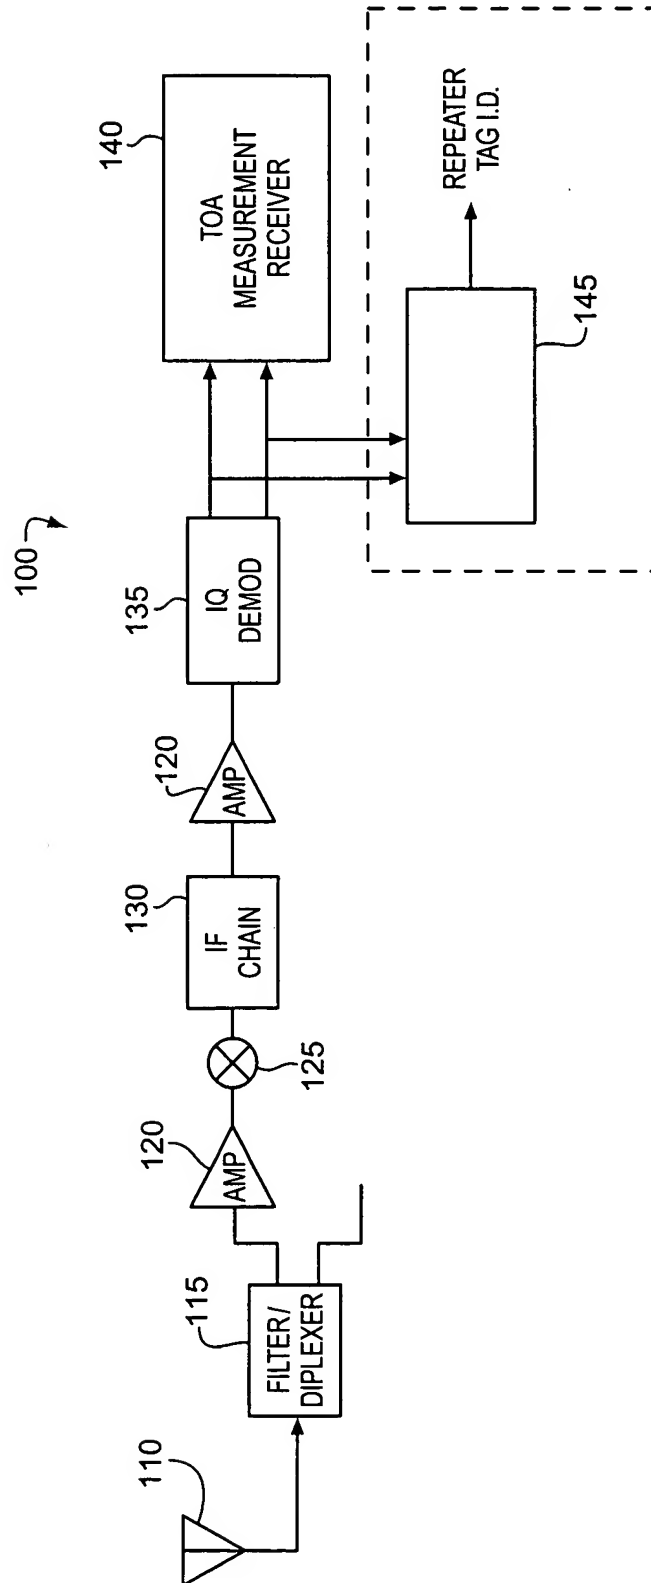


FIG. 4

5/6


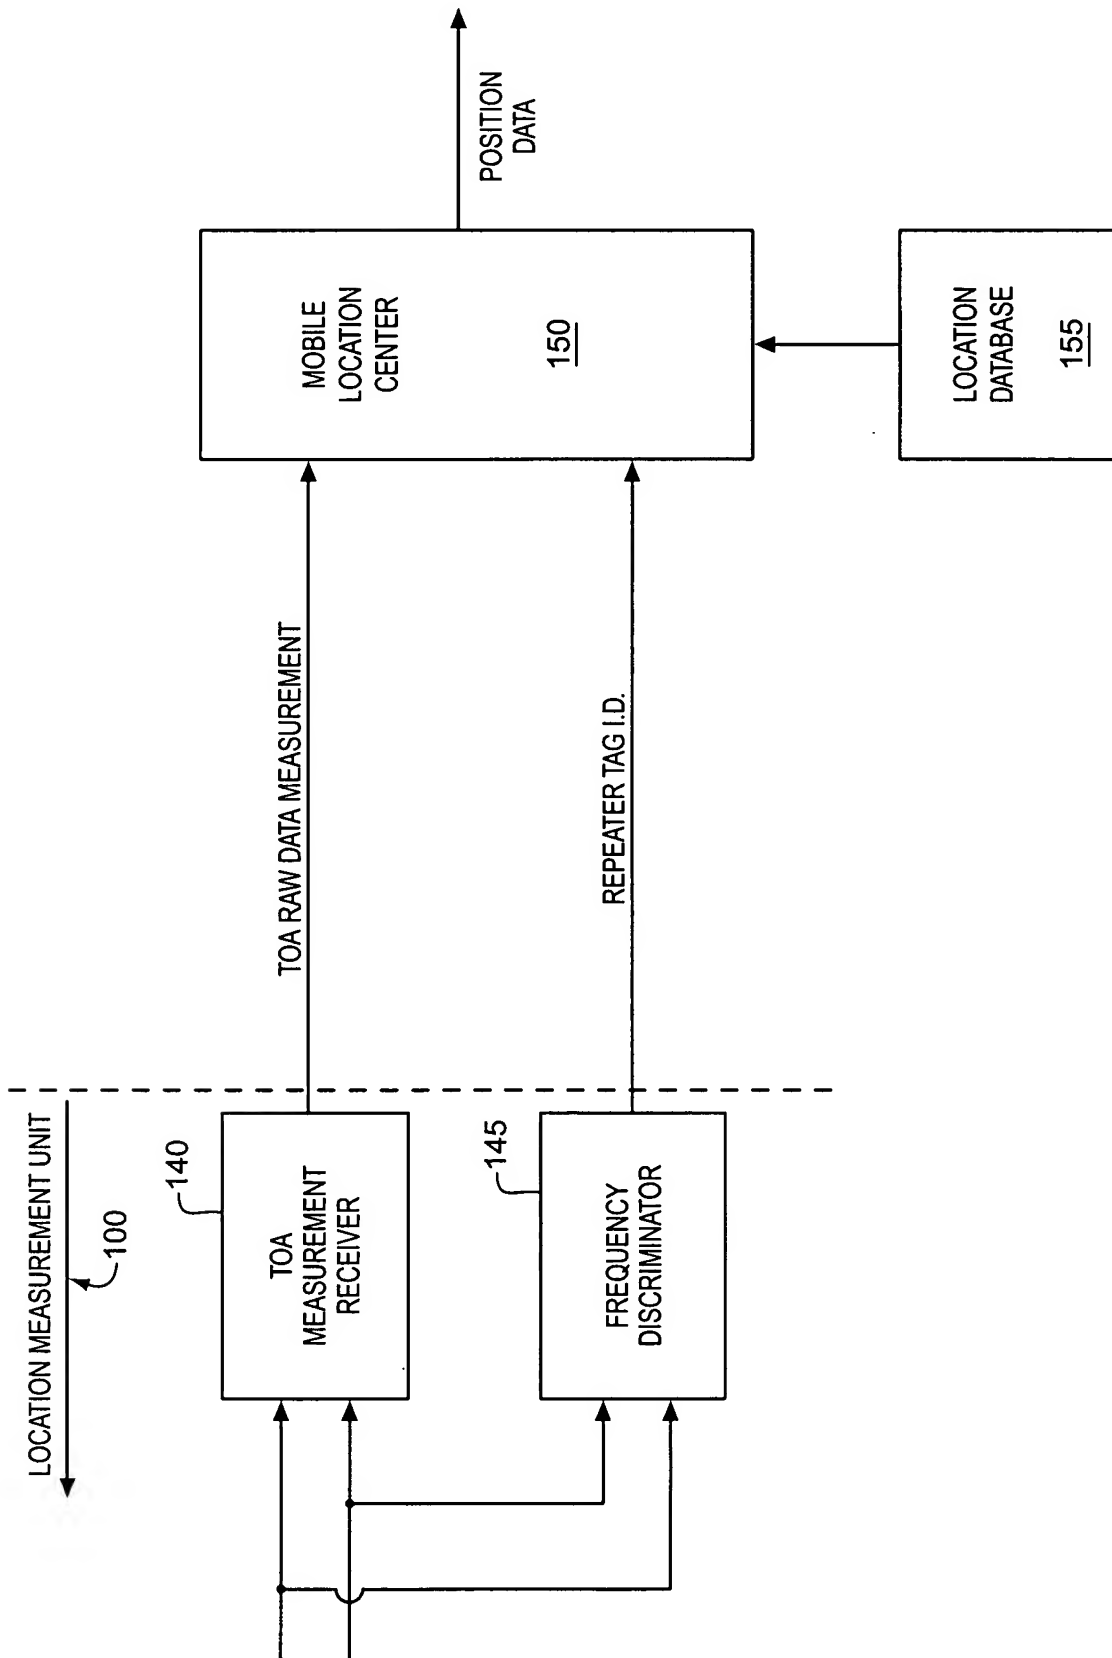


FIG. 5

6/6

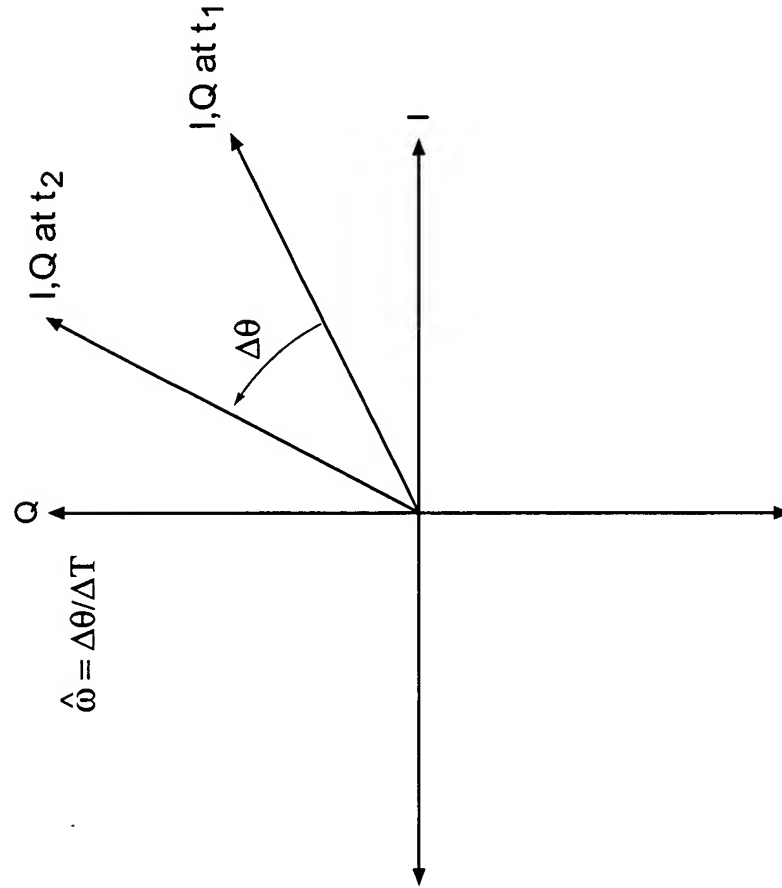

- Measure Phase at two times and take difference
- Performance is close to optimum in AWGN with a single cisoid present

FIG. 6